

What you will need


Shower 2 sided 900 x 900 mm

- 2400 x 900 unlipped panel x 2
- Internal Corner Profile x 1
- End Cap Profile x 2
- Seal Kit x 1
- High Grab Adhesive x 2
- Silicone Sealant x 1




Walk-in Shower 1800 x 900 mm

- 2400 x 900 unlipped panel x 1
- 2400 x 1200 Hydrolock panel x 1
- 2400 x 598 Hydrolock panel x 1
- Internal Corner Profile x 1
- End Cap Profile x 2
- Seal Kit x 2
- High Grab Adhesive x 3
- Silicone Sealant x 3

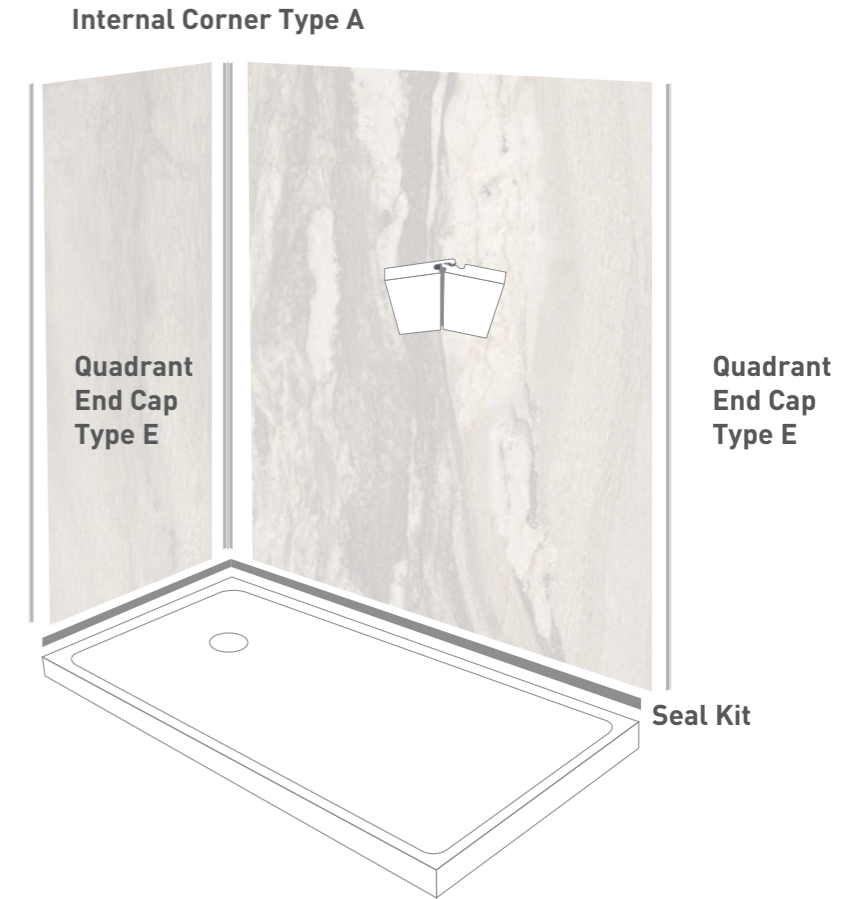


Bath 2 sided 1800 x 900 mm

- 2400 x 900 unlipped panel x 1
- 2400 x 1200 Hydrolock panel x 1
- 2400 x 598 Hydrolock panel x 1
- Internal Corner Profile x 1
- End Cap Profile x 2
- Seal Kit x 2
- High Grab Adhesive x 3
- Silicone Sealant x 3

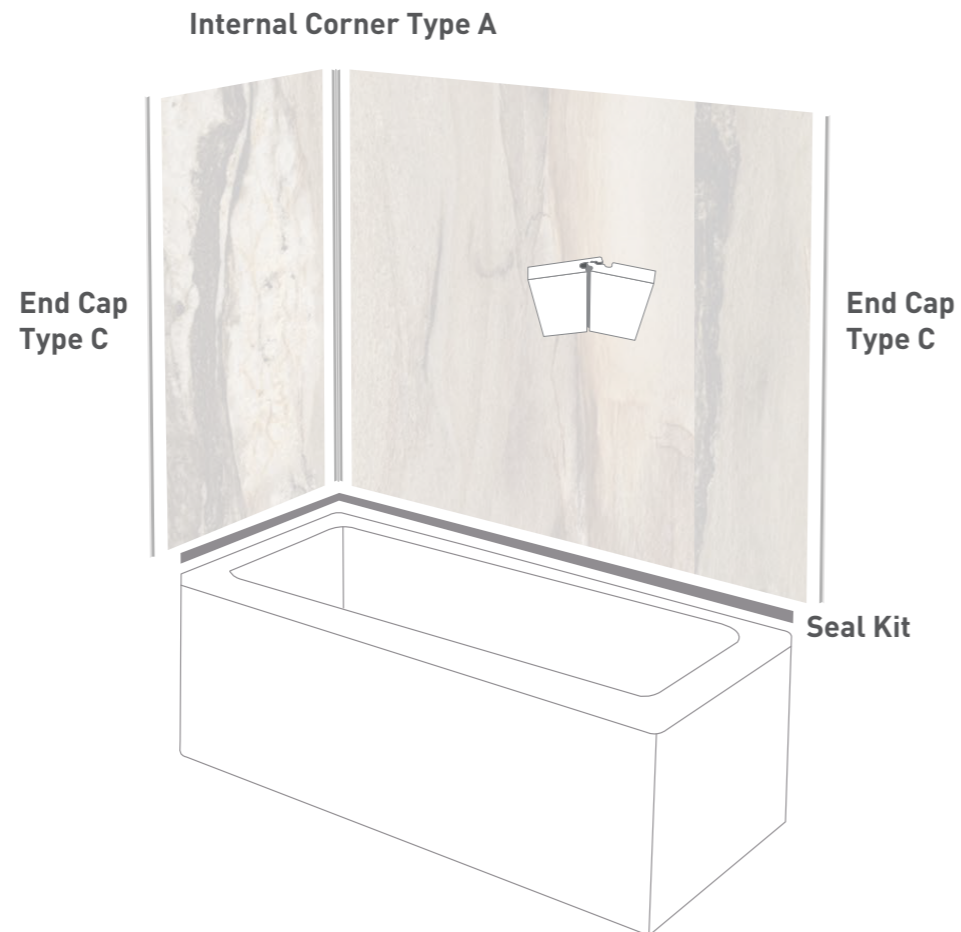

Bath 3 sided 1800 x 900 mm

- 2400 x 900 unlipped panel x 2
- 2400 x 1200 Hydrolock panel x 1
- 2400 x 598 Hydrolock panel x 1
- Internal Corner Profile x 2
- End Cap Profile x 2
- Seal Kit x 2
- High Grab Adhesive x 4
- Silicone Sealant x 5

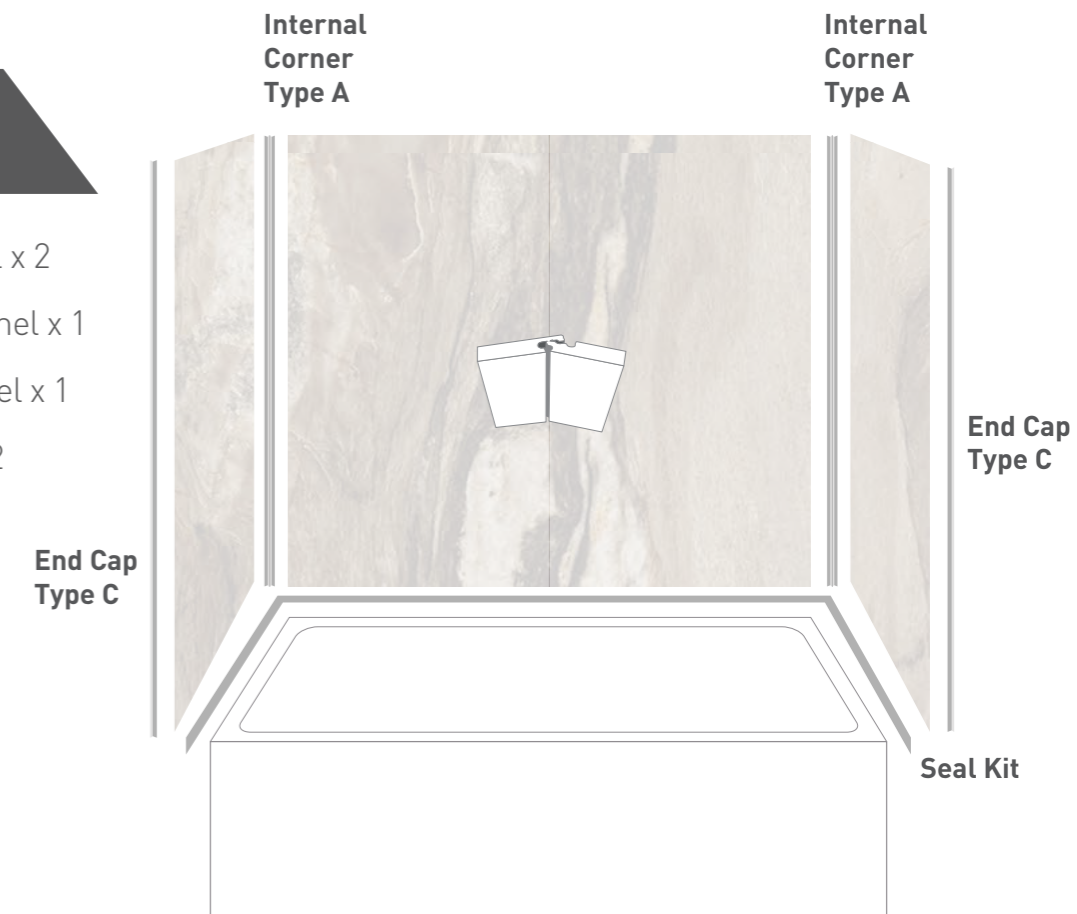

Denotes Hydrolocked panels
(no mid-joint required)